 
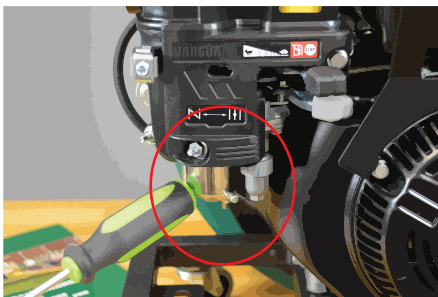 
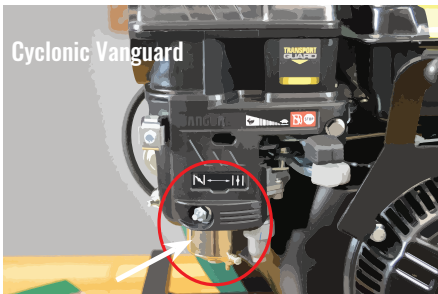 


My Engine Will Not Catch/ Will Start and then Stop

Please refer to the steps below for instructions on how to dislodge the float valve on your engine. For our fastest service during our peak seasons, please send a note to support@woodlandpowerproducts.com and we will be in touch within 1 business day or, you can contact us at our main line 888-531-7253 and at the prompt, please press 2 for technical support.

Your Float Valve Could be Lodged.

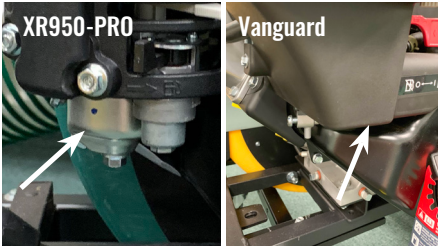

1. Dislodging the float valve.

- To dislodge the float valve, find the carburetor. It's located near the metallic fuel bowl underneath the air filter. Give it a nice solid tap with the bottom of a screwdriver or rubber mallet.
- You can even take a couple laps around your property with the engine off.
- If the float valve was lodged this will dislodge it.

Thanks for being a Cyclone Rake customer and we hope this troubleshooting guide has helped resolve your issue!

WOODLAND POWER PRODUCTS, INC.

72 Acton Street, West Haven, Connecticut 06516

©2020, Woodland Power Products, Inc.