

Troubleshooting Shaking Tires

Please refer to the steps below for instructions on how to troubleshoot shaking tires. For our fastest service during our peak seasons, please send a note to support@woodlandpowerproducts.com and we will be in touch within 1 business day or, you can contact us at our main line 888-531-7253 and at the prompt, please press 2 for technical support.





1. What is causing my tires to shake?

- If there is excessive shaking with the wheels it can be caused by a couple things.
- The speed at which you are going, the weight of the bag, and the surface you are traveling on.
- If your wheels are shaking quite a bit, you may need to slow down.
- The faster you go the more the wheels will shake, so try slowing down, most often that will fix it.
- If you are driving across pavement or a similar hard surface, the wheels may start to shake excessively; this is normal, since the Cyclone Rake is designed to work on your yard.

2. Is the bag empty or full?

- The lighter the bag, the more it will shake.
- As you add weight, the shaking should continue to go down.

3. Did you check your tire pressure?

- If you have our Dual-PRO Super Wheels, you want to make sure your tire pressure is anywhere between 12-15 psi per tire.
- If you have our Single Wheels, you want to make sure your tire pressure is anywhere between 20-25 psi per tire.

Often it is a mix of or all of the above issues, so reducing whatever factors you can, will always help.

Thanks for being a Cyclone Rake customer and we hope this troubleshooting guide has helped resolve your issue!