


The Wall Mount Kit makes storing your Cyclone Rake really convenient. If you remove the wheels, the entire chassis and collector unit can be stored in a space just 8 inches deep. For safety, be sure to mount the hooks securely. Follow the directions below.

Installation

- 1. The hooks should be mounted with the bottom edges 74 inches from the floor for the Classic and Commander. For the Commercial PRO, XL and Z-10, the hooks should be mounted at 81 inches. You can mount them higher if you like. Space them 16 inches apart —the standard spacing for wall studs.
- 2. The hooks must be lag-bolted directly into 2 x 4 wall studs for strength. Use the 5/16 x 2.5 inch lag bolts provided. Drill 1/4 inch pilot holes to start the lag bolts. **Do not fasten into plaster board**. It won't hold. **Never use wallboard anchors.**
- 3. If you don't have 2 x 4 studs on 16 inch centers, install a secure cross brace and fasten the hooks to that. The brace should be a least a 1 x 8 board, securely nailed or lag bolted to the nearest wall studs. A piece of 2 x 8 lumber is even better. If you use a 1 x 8 board, use 5/16 bolts and nuts, **not wood screws**, to fasten the hooks.
- 4. To fasten to concrete or masonry walls, use masonry anchors(shown) and 5/16 lag screws. Masonry anchors are available in any hardware store. Be sure to get the size designed for 5/16 lag screws. *Never use plastic anchors.*




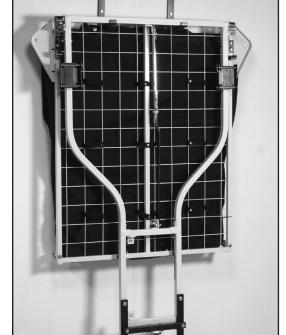

How to Hang Your Cyclone Rake

To hang the Cyclone Rake most compactly, do as follows:

- 1. Fold up the Collector and put it on the hooks first, with the *J-hooks facing out* and at the top.
- 2. Then hang the main chassis, with the *hitch forks down and the wheels facing out*.
- 3. The chassis will hang much easier if you remove the wheels from the caster pads first. This greatly reduces the weight, and saves space as well. (*Tip: Always put the pins right back into the caster pads so you don't lose them.*)

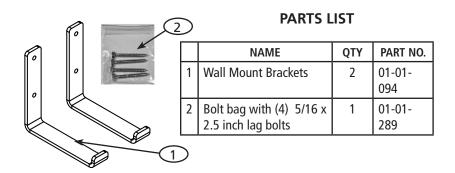

WOODLAND POWER PRODUCTS, INC.