



Aligning and Securing the Top Screen

For proper operation the top screen must be aligned and secured

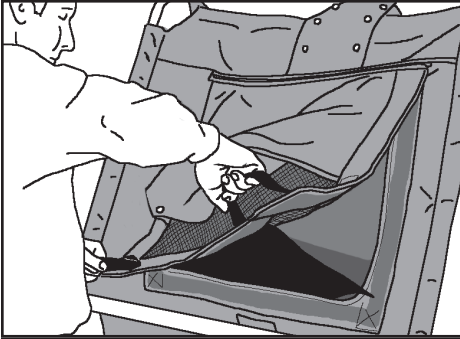


1. Raise the collector frame and lock it in the dump position. Lift the top screen as shown to release the Velcro on all 3 sides. Then carefully lower the screen to align the Velcro on one side. Run your hands along all three sides to press the Velcro together.

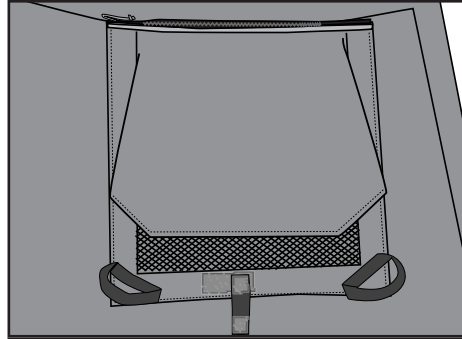


2. When properly aligned, no Velcro should be visible around the top screen, and the rear Velcro strap will be in place to hold the top screen.

Adjusting the Outer Rear Buckles


The outer buckles should be adjusted for proper closure.

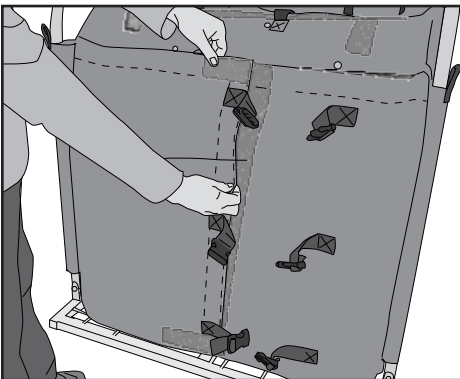

1. Close the three inner buckles. Then carefully close the outer doors so the Velcro strips overlap. *Note: for new collector bags, the fabric may be stiff and this adjustment may require some pulling. The fabric will relax with use.*

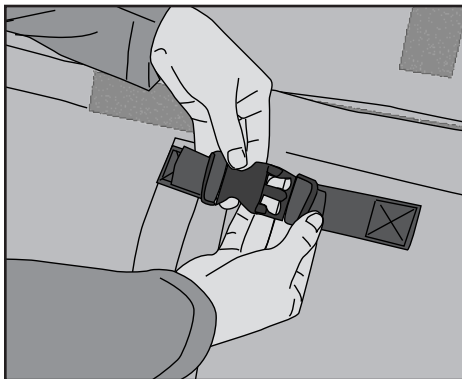

2. Once the Velcro strips are aligned, snap the buckles together. If the webbing straps are set too short, adjust them to lengthen. If the webbing straps are set too long, shorten them up. You may adjust both sides of the webbing.

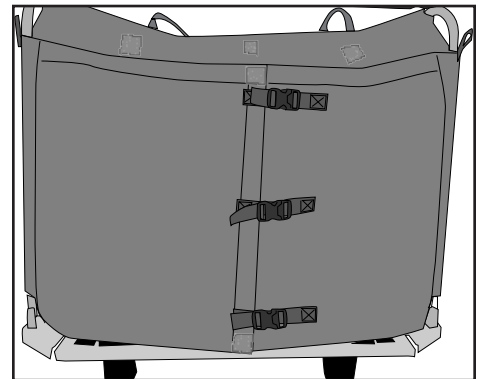

3. This shows the proper final adjustment. With the Velcro lined up, the buckles will snap together without excess slack or excess tension on the webbing.