


Follow these simple steps to replace your Briggs and Stratton Fuel Bowl & Gasket.

1. Locate and unscrew the fuel bowl (see below for your engine type).  
Make sure to remove the rubber gasket as well.
2. Install the new fuel bowl and gasket, being careful not to cross thread the fine pitch thread of the bowl.



For Intek engines, look on the side for the fuel bowl.

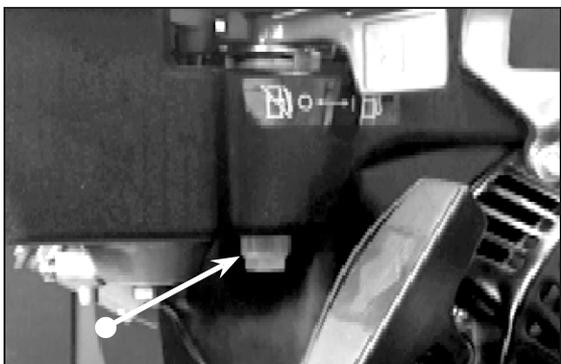

For 5.5 and 6.5 HP Vanguard engines, the fuel bowl is beneath the red lever.



For 8 and 10 HP Vanguard engines, fuel bowl is beneath the red lever and somewhat hidden by the plastic shroud.

**NOTE:** Some Fuel Bowls may be plastic or aluminum. They both function the same.

