

These Instructions are for both Single and Dual-PRO Wheels. These Wheels can be installed 2 ways.

**Quick Release Installation:** If you are planning on removing your wheels when storing your Cyclone Rake.

**Permanent Installation:** If you are planning to keep your wheels attached at all times.

### PARTS INCLUDED:

- (2) 3/8-16 x 5" Hex Bolts
- (2) 3/8-16 nylon lock nuts
- (1) Quick-Release Pin
- (1) Bowtie Pin

### TOOLS YOU'LL NEED:

- (2) 9/16" Box Wrenches or Sockets

## QUICK RELEASE INSTALLATION



### 1. Lean the Chassis against the wall.(it's easier)

**2. (Fig. 1)** Install one 3/8-16 x 5" hex head bolt through the top hole of the caster pad. Fasten with a 3/8-16 nylon lock nut.

**3. (Fig. 2)** Slip the wheel under the bolt.

**4.** Then install the Quick-Release Clevis Pin into lower hole. Secure with the Bowtie Pin.

**5.** Repeat on the other side.

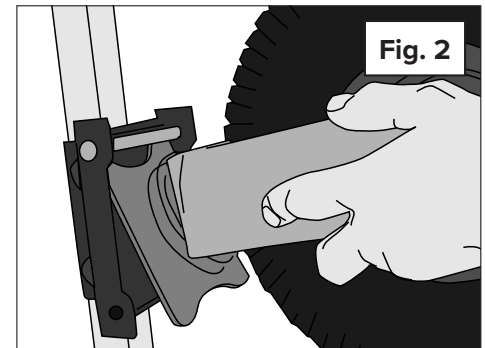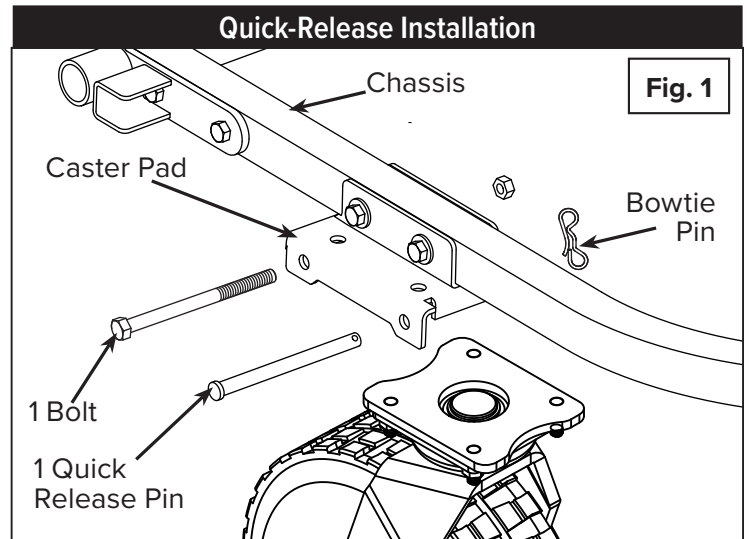

## PERMANENT INSTALLATION

### 1. Lean the Chassis against the wall. (it's easier)

**2. (Fig. 3)** Install one 3/8-16 x 5" hex head bolt through the top hole of the caster pad. Fasten with a 3/8-16 nylon lock nut.

**3. (Fig. 2)** Slip the wheel under the bolt.

**4.** Then install the second 3/8-16 x 5" hex head bolt into the lower hole and secure with a 3/8-16 nylon lock nut.

**5.** Repeat on the other side.

