

## #208-009 Special Hitch

## **Installation Instructions**


The Cyclone Rake 208-009 Special Hitch is designed to fit multiple mower types. To install the hitch, follow the instructions below.


- 1. Place the mower on a flat level surface, such as a concrete floor.
- 2. The 208-009 Special Hitch attaches to the top of the rear frame on your mower as shown in Figure 1.
- 3. Remove existing bolts and hardware from rear tractor frame (A).
- 4. Assemble the 208-009 Special Hitch. Secure each Grasshopper hitch leg (2) to the 90° hitch bar (1) using two 3/8 x1.5-inch bolts, washers and lock nuts as shown in Figure 2.
- 5. Install the assembled 208-009 Special Hitch using the remaining two 3/8 x 1.5-inch bolts, washers and lock nuts, provided. The bolt heads and washers should be installed on top of the hitch as shown in Figure 3.


That's it. Your 208-009 Special Hitch installation is complete. To finish the assembly of your Cyclone Rake, please return to your Owner's Manual now.

**Note:** Check the bolts before each use to make sure everything is tight.

**User Tip:** A small amount of grease on the Cyclone Rake hitch pins will help minimize hitch bar wear over time.

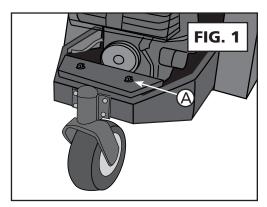

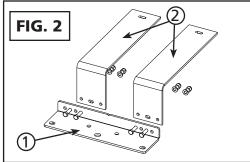


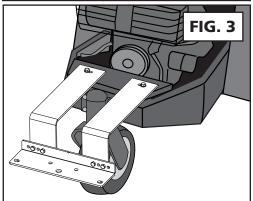

## 208-009 Special Hitch

COMPONENT LIST

KEY#	PART #	NAME	QTY
1	01-01-870	90° Hitch bar	1
2	01-01-1780	Grasshopper hitch leg	2
3	01-01-410	3/8-16 x 1.5 Hex bolt	6
4	01-01-180	3/8 Washer	6
5	01-01-240	3/8-16 Lock nut	6

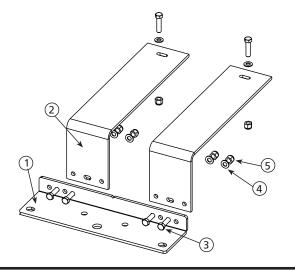

## WOODLAND POWER PRODUCTS, INC.