




## **Assembly and Installation**

This Mower Deck Adapter (MDA) is designed to work with several mower deck designs. The MDA does not need an airtight fit to deliver exceptional vacuum performance. It simply needs to be installed in front of the opening on the mower deck. Follow the instructions below to install.

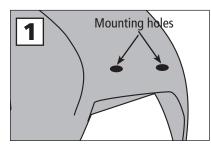



1. Remove the hinged grass deflector shield and hinge bracket from your mower deck to expose the deck opening and the two mounting holes.



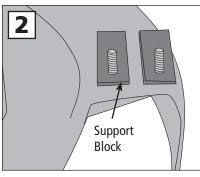


2. Push the two 1.5-inch bolts up through the bottom of the mower deck and screw them into the threaded holes in the small rectangular Support Blocks. Tighten firmly with a wrench. You will now have two threaded studs protruding from your mower deck.

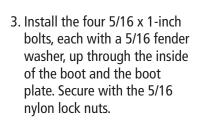

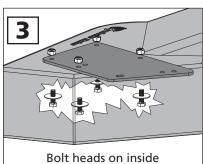


4. Install the MDA assembly onto the mower deck, Place one rubber washer on each stud. Spin on the **Boot Plate Clamp Knobs** over the mounting bolts.



5. Connect the hose collar onto the MDA with the latches and cut the hose to length as described in your owner's manual if needed.

That's it you're finished!

## COMPONENT LIST PART NO. NAME QTY Special Boot w/strikes 01-02-102 05-02-102 Special Boot w/strikes - XL Special Boot w/strikes - Z-10 06-02-102 01-01-150 5/16-18 x 1.5 Full-thread bolt 5/16-18 Nylon lock nut 01-01-151 4 01-01-152 5/16 Washer 01-01-171 5/16-18 x 1 Bolt 4 01-01-175 5/16 Fender washer 4 01-01-291 Clamp Knob - Boot Plate 01-01-365 Warning label 01-01-441 Support Block 2 01-01-830 S48 Boot Plate 01-01-1990 Rubber washer 01-02-125 Support block, 1.5 bolt & washer Standard strike w/hardware 01-02-564 3 8" x 8" Collar complete - green 01-02-142 01-02-486 7" x 8" Collar complete 05-02-080 8" x 8" Collar complete - yellow 1 10" x 10" Collar complete 06-02-080 08-02-080 8" x 6" Collar complete

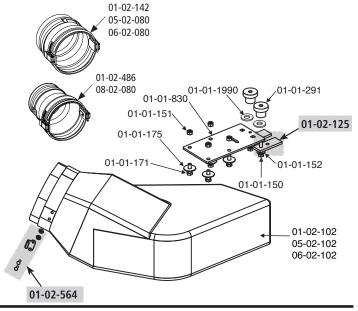

## WOODLAND POWER PRODUCTS, INC.