


Assembly and Installation

This Mower Deck Adapter (MDA) is designed to work with several mower deck designs. The MDA does not need an airtight fit to deliver exceptional vacuum performance. It simply needs to be installed in front of the opening on the mower deck. Follow the instructions below to install.


Safety Note:
If you remove the Mower Deck Adapter later, you MUST re-install the grass deflector.




1. Remove the hinged grass deflector from your mower deck to expose the deck opening by removing the two bolts that are holding on the entire assembly (Fig. 1)

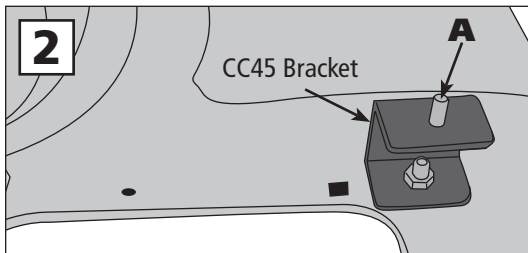


2. Install one 5/16-18 x 1-inch bolt(A) into the top of the CC45 Bracket. Then install another 5/16-18 x 1-inch bolt with a washer up from the bottom of the mower deck, through the hole closest to the front of the deck. Place the CC45 bracket on top of the bolt and secure with a 5/16 nylon lock nut. (Fig. 2)

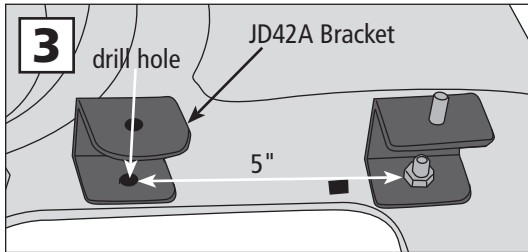

3. Position the JD42A bracket on top of the deck approximately 5 inches to the left of the first bracket, with the bottom edge of the bracket up against the small lip of the mower deck. Mark the location of this hole onto the mower deck. Drill this hole into the mower deck using a 5/16 drill bit. (Fig. 3)

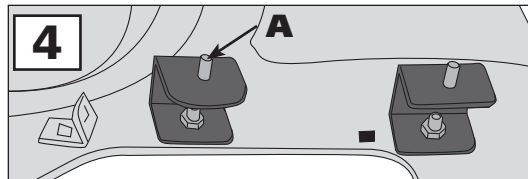


4. Install one 5/16-18 x 1-inch bolt(A) into the top of the JD42A Bracket. Then install another 5/16-18 x 1-inch bolt with a washer up from the bottom of the mower deck and secure with a 5/16 nylon lock nut. (Fig. 4)

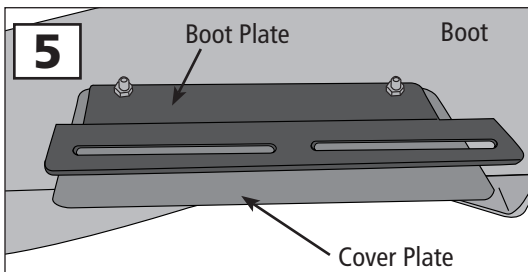

5. Place the flat Cover Plate then the Boot Plate onto the top of the boot. Line them up with the predrilled holes in the boot. Secure using four 5/16 bolts with washers up through the inside of the boot, and both plates. Then fasten with the the 5/16 lock nuts. Make sure the bolt heads are in the inside of the boot.(Fig 5.)

6. Place the entire MDA assembly onto the brackets. Place one rubber washer on each bracket stud. Spin on the Boot Plate Clamp Knobs and tighten. (Fig. 6)

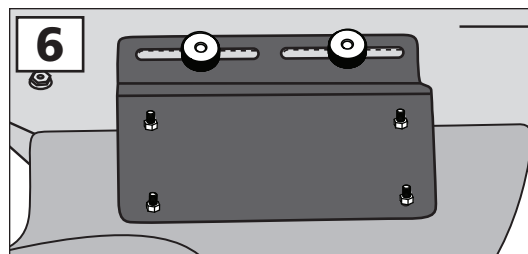

7. Attach the hose collar onto the MDA with the latches provided. Cut the hose to length as described in your owner's manual.

That's it. You're finished.

Parts List on reverse.

COMPONENT LIST

MDA-036

PART NO.	NAME	QTY
01-02-143	Standard w/strikes	1
05-02-143	Standard w/strikes - XL	1
06-02-243	Standard w/strikes - Z-10	1
01-01-150	5/16-18 x 1.5" Hex bolt	4
01-01-151	5/16-18 Nylon lock nut	6
01-01-152	5/16 Washer type A series W	2
01-01-171	5/16-18 x 1" Hex bolt	4
01-01-175	5/16 Fender washer	4
01-01-291	Clamp knob - Boot Plate	2
01-01-069	Boot Plate	1
01-01-1660	CC45 Support Bracket	1
01-01-1993	JD42 Deck Riser	1
01-01-1990	Rubber washer	2
01-01-2073	Cover Plate	1
01-02-564	Standard strike w/hardware	3
01-02-142	8" x 8" Collar complete - green	1
01-02-486	7" x 8" Collar complete	1
05-02-080	8" x 8" Collar complete - yellow	1
06-02-080	10" x 10" Collar complete	1
08-02-080	8" x 6" Collar complete	1

