



### Assembly and Installation

This Mower Deck Adapter (MDA) is designed to work with several mower deck designs. The MDA does not need an airtight fit to deliver exceptional vacuum performance. It simply needs to be installed in front of the opening on the mower deck. Follow the instructions below to install.


1. Remove the hinged grass deflector shield and hinge bracket from your mower deck to expose the deck opening and two mounting holes.

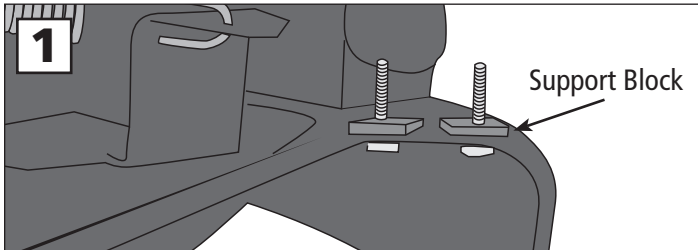

2. Push the two 1.5-inch bolts up through the bottom of the mower deck and screw them into the threaded holes in the small rectangular Support Blocks. Tighten firmly with a wrench. You will now have two threaded studs protruding from your mower deck. (Fig. 1)

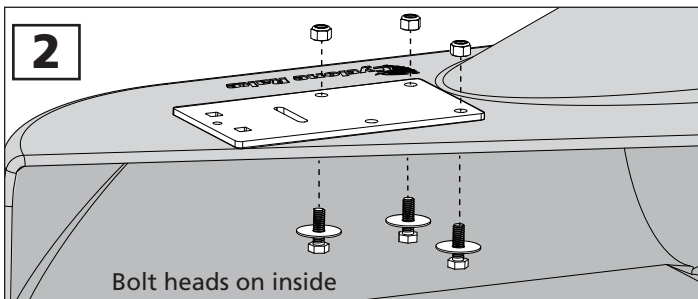

3. Install the three 5/16 x 1-inch bolts, each with a 5/16 fender washer, up through the inside of the boot and the boot plate. Secure with the 5/16 nylon lock nuts. (Fig. 2)

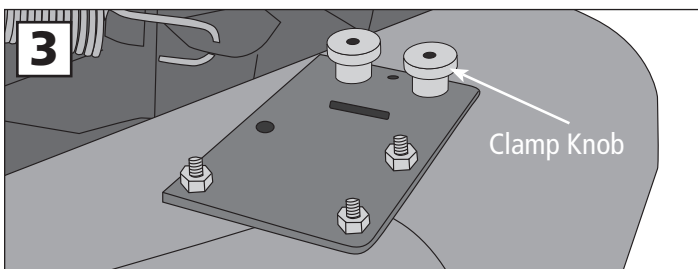

4. Install the MDA onto the mower deck. Place one rubber washer on each stud. Spin on the Boot Plate Clamp Knobs.
5. Connect the hose collar onto the MDA with the latches and cut the hose to length as described in your owner's manual if needed. That's it you're finished!

#### Safety Note:

**If you remove the Mower Deck Adapter later, you MUST re-install the grass deflector.**

#### COMPONENT LIST MDA-R

PART NO.	NAME	QTY
01-02-143	Standard Boot w/strikes	1
05-02-143	Standard Boot w/strikes - XL	1
06-02-143	Standard Boot w/strikes - Z-10	1
01-01-151	5/16-18 Nylon lock nut	3
01-01-171	5/16-18 x 1 Hex bolt	3
01-01-175	5/16 Fender washer	3
01-01-291	Clamp Knob - Boot Plate	2
01-01-830	S48-Boot Plate	1
01-01-1990	Rubber washer	2
01-02-125	Support block, 1.5 bolt & washer	2
01-02-564	Standard strike w/hardware	3
01-02-142	8" x 8" Collar complete - green	1
01-02-486	7" x 8" Collar complete	1
05-02-080	8" x 8" Collar complete - yellow	1
06-02-080	10" x 10" Collar complete	1
08-02-080	8" x 6" Collar complete	1

