


Assembly and Installation




This is the Z-10 Extender Collar (A). It adds about 8 inches to the length of your mower deck hose to provide additional clearance around the rear wheel of your mower.

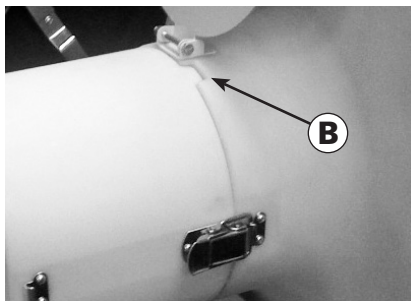

1. To attach, line up the tab on the extender collar with the corresponding recess (B) on the blower intake and secure it in place with the two latches.



2. Attach the curved plastic elbow marked "BLOWER" (C) onto the Extender Collar. Continue the deck hose installation as instructed in your Cyclone Rake Owner's Manual.

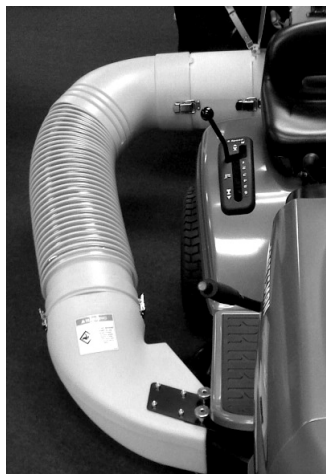

3. After the assembly is complete, there should be enough clearance so the rear wheel does not interfere with the deck hose.

NOTE: If the wheel still interferes with the hose, a second extender collar may be needed. Please contact us at 888-531-7253 and an additional collar will be sent.